


Visible APC Red Laser Module APCD-650-27-C3-A&B

6-2D-LM65-031 Rev.00

Φ20 mm 650nm Laser Module

Features

APC (auto power control) driver circuit
High quality of glass lens
Adjustable focus

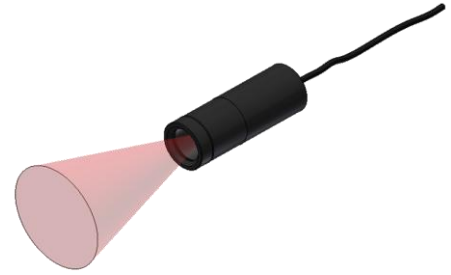

Absolute maximum ratings


Parameter	Symbol	Rating	Unit
Power supply voltage	V _{cc}	3	V
Laser Module optical output power	P _o	<3	mW
Operation temperature	T _{opr}	0~50	°C
Storage temperature	T _{stg}	-35~85	°C

Electrical and optical characteristics (T_c=25 °C)

Parameter	Symbol	Min.	Typ.	Max.	Unit	Conditions
Wavelength	λ		655		nm	P _o = 3mW
Operation current	I _{op}	-	35	45	mA	P _o = 3mW ; V _{cc} =3V
Optical output power	P _{out}	2		3	mW	V _{cc} =3V
Operation voltage	V _{op}	3	-	3.3	Volt	

* Sufficient heat dissipation is required for CW operation.

Outline dimensions (Units: mm)

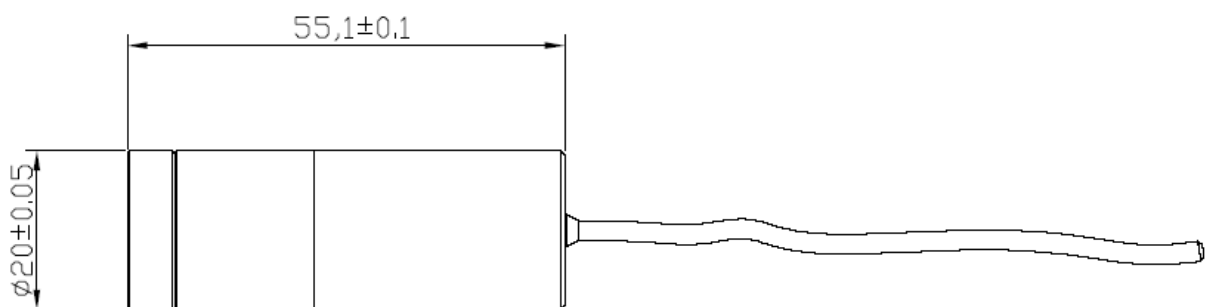

Red wire : Vcc

Black wire : GND

ARIMA LASERS CORP.

PHONE: 886-3-4699800 | FAX: 886-3-4699600

E-MAIL: Ldsales@arimalasers.com | www.arimalasers.com

For reference only. Contents above are subject to change without notice.


Arima
LASERS

Visible APC Red Laser Module APCD-650-27-C3-A&B

6-2D-LM65-031 Rev.00

Φ20 mm 650nm Laser Module

Instruction manual

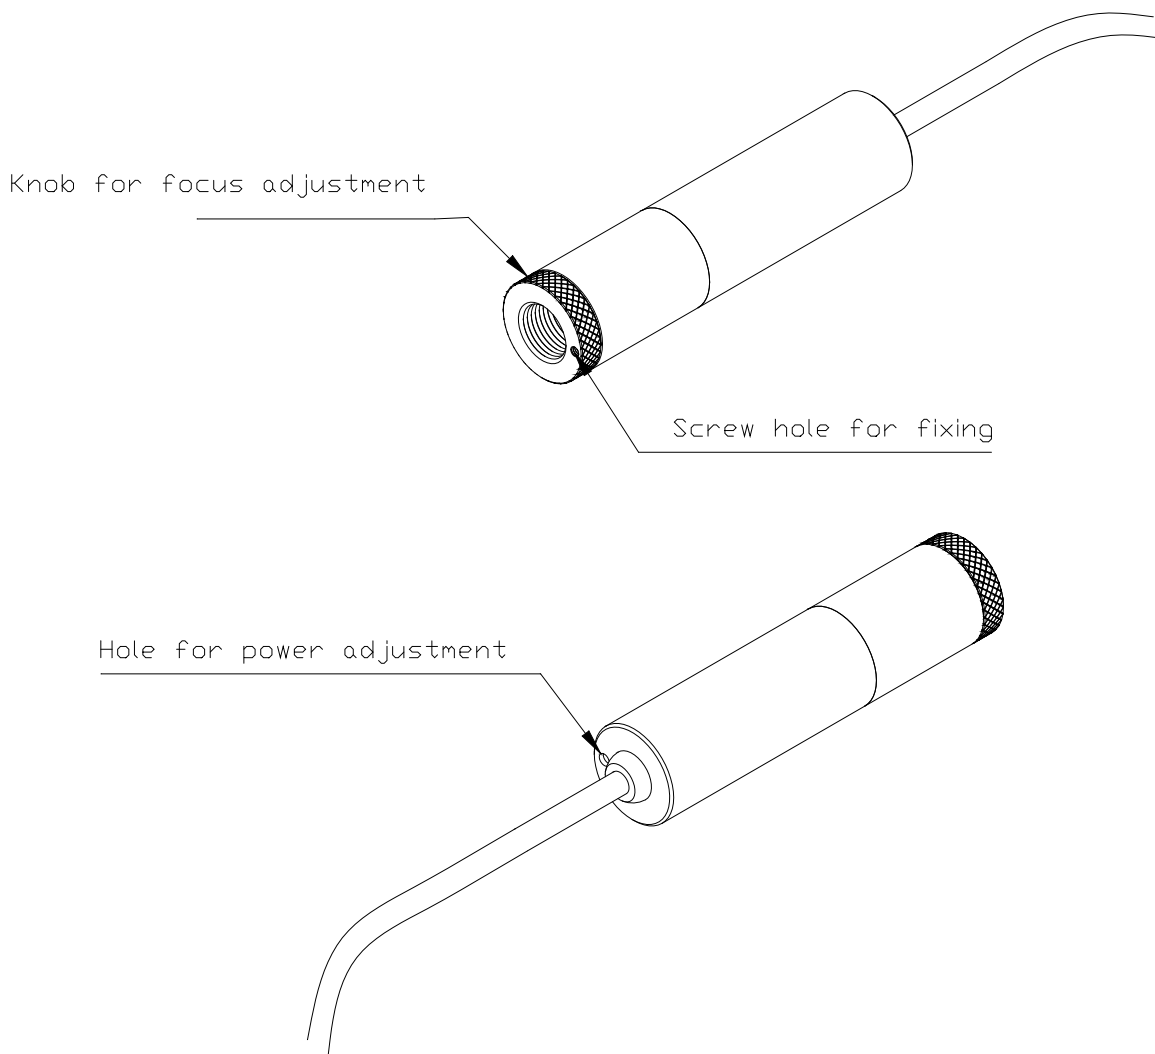

● Precautions

- * Do not operate the device above maximum ratings. Doing so may cause unexpected and permanent damage to the device.
- * Take precautions to avoid electrostatic discharge and/or momentary power spikes. A change in the characteristics of the laser or premature failure may result.
- * Proper heat sinking of the device assures stability and lifetime. Always ensure that maximum operating temperatures are not exceeded.
- * Observing visible or invisible laser beams with the human eye directly, or indirectly, can cause permanent damage. Use a camera to observe the laser.
- * No laser device should be used in any application or situation where life or property is at risk in event of device failure.
- * Specifications are subject to change without notice. Ensure that you have the latest specification by contacting us prior to purchase or use of the product.

ARIMA LASERS CORP.

PHONE: 886-3-4699800 | FAX: 886-3-4699600

E-MAIL: Ldsales@arimalasers.com | www.arimalasers.com

For reference only. Contents above are subject to change without notice.

Arima
LASERS