

Visible APC Laser Module


APCD-635-12-10-A&B

6-2D-LM63-027 Rev.00

Φ10.5mm 635nm Coaxial Laser Module

Features

- APC (auto power control) driver IC inside.
- 5mW output power.
- Output beam is aligned to the centre-line of the module.
- The tolerance of $\theta/2$ is $\pm 0.05^\circ$.

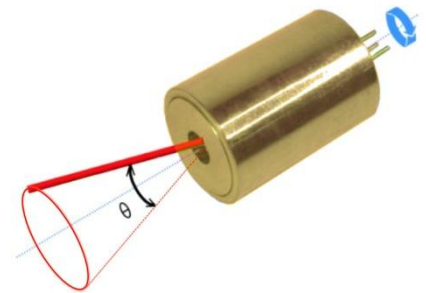

Absolute maximum ratings


Parameter	Symbol	Rating	Unit
Power supply voltage	V _{cc}	3.3	V
Laser Module optical output power	P _o	<10	mW
Operation temperature	T _{opr}	-5~40	°C
Storage temperature	T _{stg}	-20~60	°C

Electrical and optical characteristics (T_c=25 °C)

Parameter	Symbol	Min.	Typ.	Max.	Unit	Conditions
Wavelength	λ	632	635	645	nm	P _o =10mW
Operation current	I _{op}	-	-	85	mA	P _o = 10mW ; V _{cc} =3V
Optical output power	P _{out}	8		10	mW	
Operation voltage	V _{op}	2.8	-	3.3	Volt	
Laser Beam spot size at 10m				<15mm		
Divergence angle				1.2 mrad		
Coaxial precision				< 0.1 degree		

* Sufficient heat dissipation is required for CW operation

Outline dimensions (Units:mm)

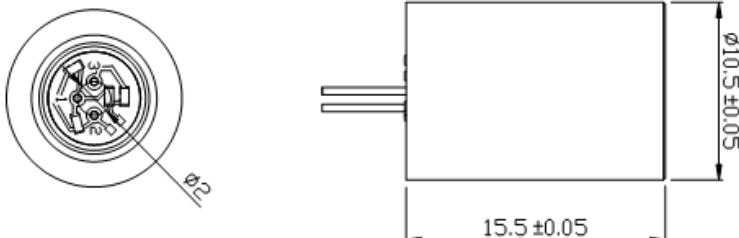

ARIMA LASERS CORP.

PHONE: 886-3-4699800 | FAX: 886-3-4699600

E-MAIL: Ldsales@arimalasers.com | www.arimalasers.com

For reference only. Contents above are subject to change without notice.


Arima
LASERS

Φ10.5mm 635nm Coaxial Laser Module




Instruction manual

DC Power connection mode 1


A type : Heat sink stand (-)

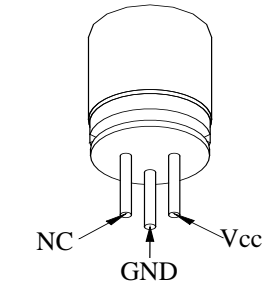

B type :Heat sink stand (+)

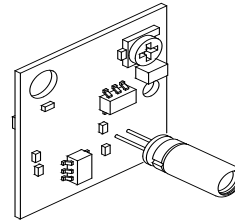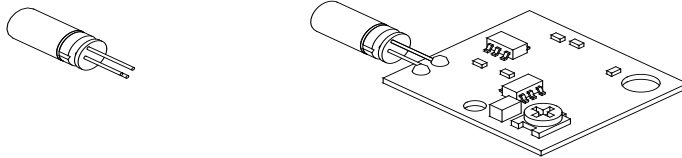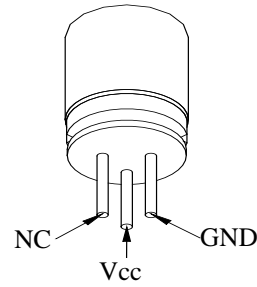

DC Power connection mode 2

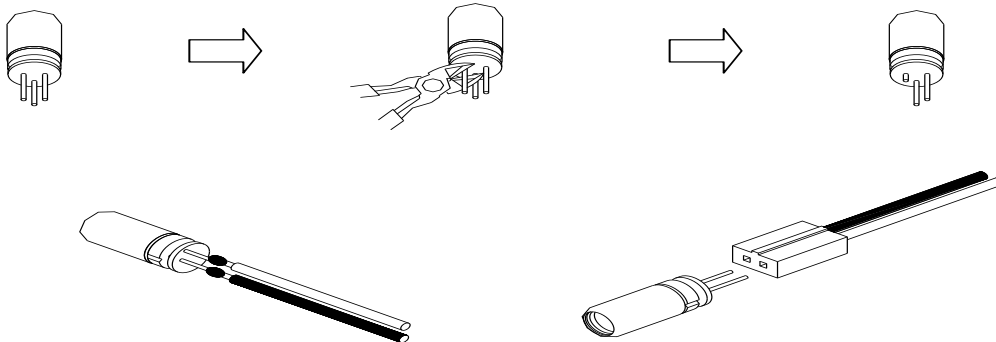

● Precautions

- * Do not operate the device above maximum ratings. Doing so may cause unexpected and permanent damage to the device.
- * Take precautions to avoid electrostatic discharge and/or momentary power spikes. A change in the characteristics of the laser or premature failure may result.
- * Proper heat sinking of the device assures stability and lifetime. Always ensure that maximum operating temperatures are not exceeded.
- * Observing visible or invisible laser beams with the human eye directly, or indirectly, can cause permanent damage. Use a camera to observe the laser.
- * No laser device should be used in any application or situation where life or property is at risk in event of device failure.
- * Specifications are subject to change without notice. Ensure that you have the latest specification by contacting us prior to purchase or use of the product

ARIMA LASERS CORP.

PHONE: 886-3-4699800 | FAX: 886-3-4699600

E-MAIL: Ldsales@arimalasers.com | www.arimalasers.com

For reference only. Contents above are subject to change without notice.